
User Instruction
Electric Patio Heater 2500W
H-60026

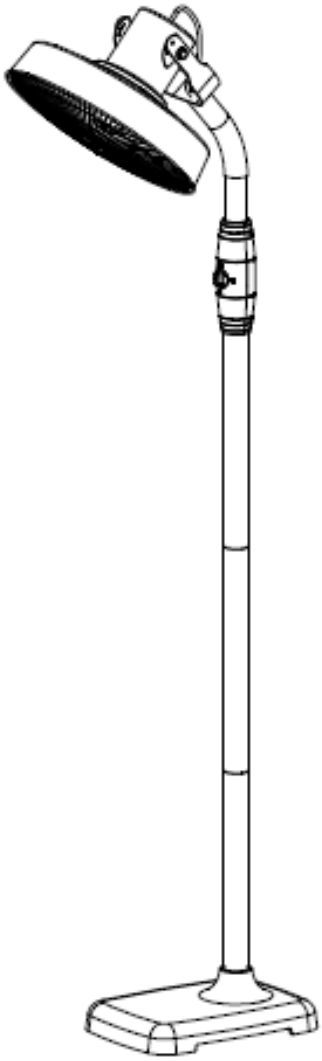

Models information

- Ratings: 220-240V 50-60Hz
- Power consumption: 1000/1500/2500W
- Height: 230CM
- Net weight: 20.5kg
- Insulation: class 1

Please read these instructions carefully before using your new halogen heater


Do Not Use in Bathtub, Shower, or Similar Environment


Warning: Do Not Cover


Caution: Hot Surface

Thank you for choosing our electric halogen patio heater . This instruction manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new heater.
This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Unpack the halogen heater making sure that all the items are present and that there are no components left in the box and that the heater head is free from any packing material.
- Using the detailed drawing follow the steps to assemble your halogen heater.
- Do not connect the halogen heater to the electrical supply until all the assembly is complete.
- Do not connect the halogen heater to the electrical supply if any of the components or the power cord is damaged in any way.

WARNING:

This heater is not equipped with a device to control the room temperature. Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.

- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

WARNING:


Only use the halogen heater on a firm solid horizontal area where all the feet on the base are in contact with the floor. (Should the heater be tilted or fall over the auto cut off switch will activate)

1. Site the heater outside or in a large open area and well away from any obstructions such as branches or where the heater is near any objects that can be effected by heat, such as furniture, curtains or other inflammable objects (minimum distance 1 meter).
2. Do not use near bath tubs, wash areas or swimming pools.
3. Do not use in unventilated areas
4. Do not use where gas, petrol, paint or other inflammable goods are stored.
5. Do not push any items through, obstruct or cover the grill of the heater head.
6. Do not position immediately above or below an electrical socket.
7. Do not move when connected to an electrical supply and always wait for the patio heater to cool down before storing away.


8. Do not touch the heater head when in use.
9. Do not leave turned on and unattended especially when children and or animals are in the vicinity.
10. The indication of the different positions of switches shall be visible from a distance of 1M.
11. The Marking concerning covering shall be visible after the heater has been installed. It shall not be placed on the back of portable heaters.
12. The unit must be placed with the clearance of 100cm to the wall and 30cm to the ceiling.
13. The unit must be correctly installed according to the instructions. Make sure the head is at least 1.8m from the floor.
14. The unit must be securely placed on a horizontal and flat surface.
15. The unit is at high temperature during operation. It keeps hot for a period after shut down. Potential danger would occur when touching it during this period.
16. Don't place the unit closed to curtain and/or other flammable objects. Otherwise there will be a danger of catching fire.
17. Don't cover the unit with anything during operation or a short time after it's shut down.
18. Don't wrap the power supply cord on the unit.
19. The unit must be handled with care, and avoid vibration or hitting.
20. The unit must be securely grounded during operation.
21. If the unit gets damaged, it must be repaired by professional electricians.
22. When the power supply cord is damaged, it must be replaced by authorized agent or other professional people to avoid danger.
23. The unit must not be positioned under a socket.
24. When assembling, keep clear from any board or flammable material.
25. The unit must be supervised by adults if it's used by a child.
26. It is not safe to install the unit by a swimming pool, in a bathroom or shower area.
27. The unit is for household use only. It is not safe to use on a building site, greenhouse, barn or stable where there's flammable dust.
28. The head of the unit is at high temperature during operation. Unplug the unit and wait till it cools before cleaning.
29. Don't use this unit in place where causticity or volatile air exists, i.e. dust, steam, gas, etc.
30. Don't use this unit as a cloth drier or towel drier.
31. Don't use this unit as a sauna heater.
32. Don't use this unit as a room heater.
33. Don't use this unit in place of animal propagating and raising.
34. Don't immerse this unit into water for cleaning.
35. The unit should be plugged in a socket, which is easily visible and reachable.
36. Two Dark points may exist on the surface of the heating elements during the first few minutes after it is turned on. This is normal, and will not affect the performance of the unit.
37. A tilt switch is fitted inside the unit for safety purpose.

Assembling Process


Step 1: Connect the bottom tube with base by screwing them together.

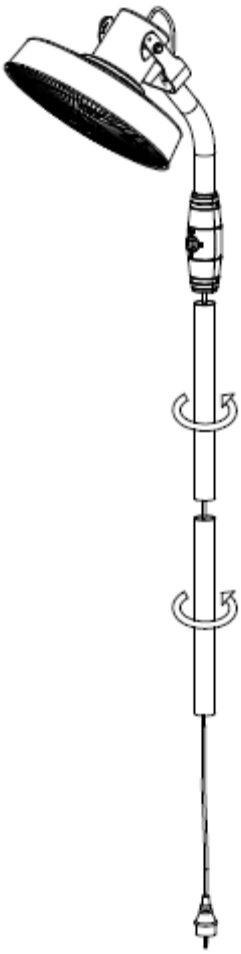


Step 2:. Place the cover through the bottom tube. then connect the heater by screwing them together

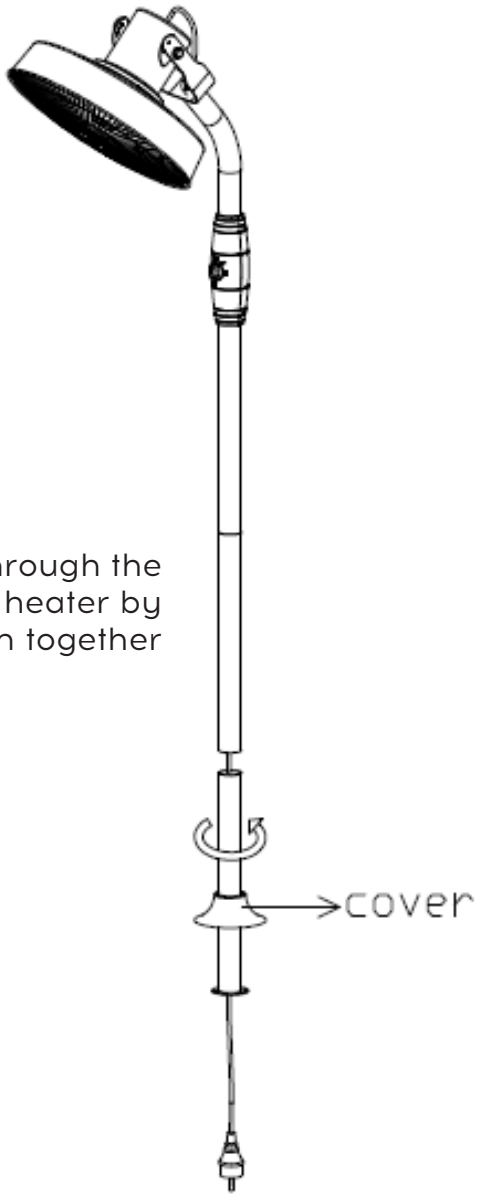


Step 3: Fix the heater on the base by 6PCS M6 * 10mm screws with M6 spanner

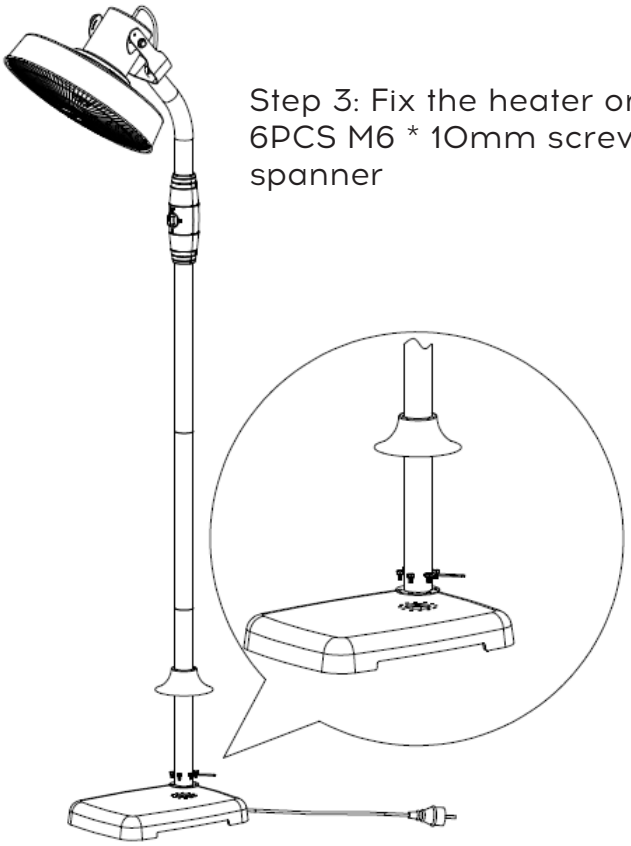


Step 4: Swing the heater to the angle you need, Then lock it with 2pcs M4*12mm screws

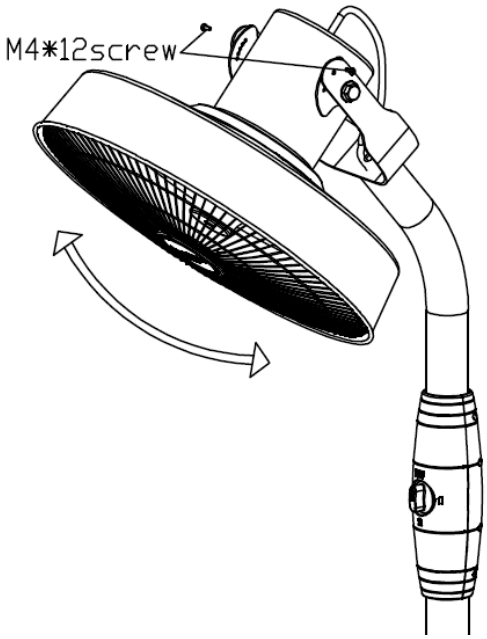

Step 5: Pull the power cord gently out of the base as much as possible. Fix the power cord under the base using the supplied 2 pcs of M4*12mm screws

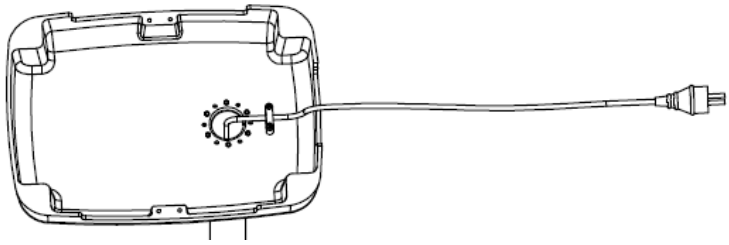


Step6: Fix 2 pcs part on the base with 4pcs M6*10mm screws, then Fix the heater on the floor. Bore two holes in the floor, fix the heater by two explosive bolts on the floor tightening the screws by spanner.

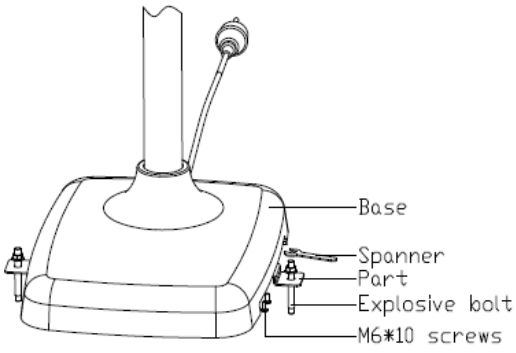


Operation

- Place the heater on a firm, level surface and plug into a grounded 230V 50Hz power outlet. Only operate the heater when it is in the upright position and the base is attached.
- Electric halogen patio heater is equipped with 3 heating settings: Low, Medium and High.

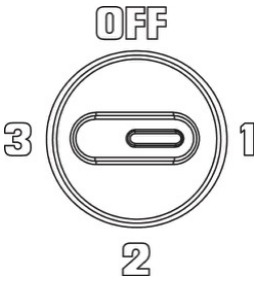


1. Turn the switch to " 1 ", it means the heater is working and on the minimum heating position (1000W).


2. Turn the switch to " 2 ", it means the heater is working and on the medium heating position (1500W).

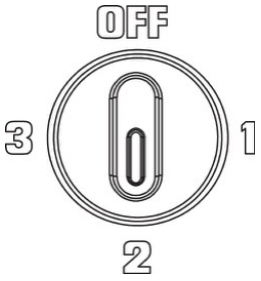

3. Turn the switch to " 3 ", it means the heater is working and on the maximum heating position (2500W).

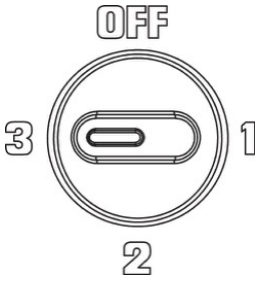

4. Turn the switch to "OFF", the heater is in off mode.

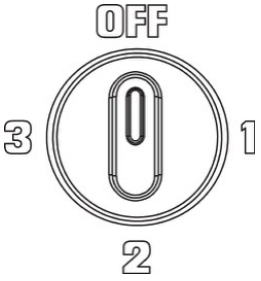

- Although the heater is shower proof, DO NOT use when raining or in wet conditions.
- Always disconnect the power coble from the electrical supply when the patio heater is not in use.

Care and maintenance

- Unplug the heater and let it cool completely
- When disconnected from the electrical supply, clean the outside of the heater with a damp cloth. Never use corrosive or solvent cleansers or immerse in water. Wait until the unit is completely dry before use.

STORAGE

If the heater will not be used for a long period of time, store, store it in a cool, dry location, To prevent dust and dirt build-up, use the original packaging to repack the heater.

Technical specification

- Ratings: 220-240V 50-60Hz
- Power consumption: 1000/1500/2500W
- Height: 230CM
- Net weight: 20.5kg
- Insulation: class 1




WEEE

This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling in the EU. For more information please contact the local authority or your retailer where you purchased the product.

מדריך הפעלה
תנור חימום חשמלי עומד לחצר 2500W

H-60026

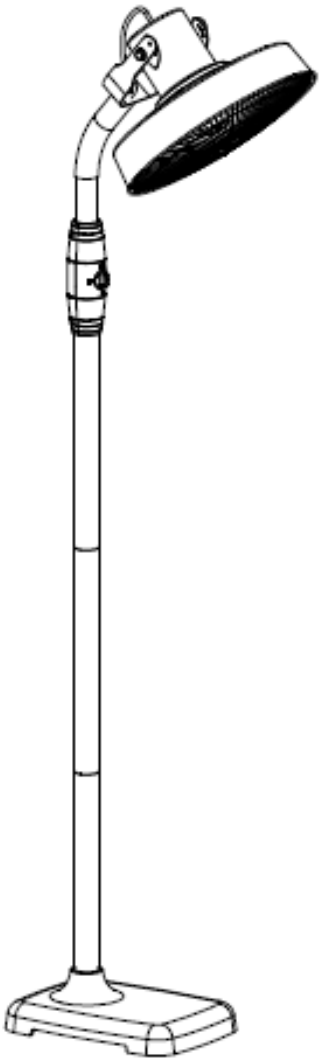

מפרט טכני

- מתח: 220-240V~ 50-60Hz
- הספק: 1000/1500/2500W
- גובה: 230 ס"מ
- משקל נטו: 20.5 ק"ג
- דרגת בידוד: Class 1

אנא קרא את המדריך בעיון לפני השימוש ושמור אותו לעיון עתידי







תודה שבחרת בתנור החימום החשמלי הלוגני שלנו.
מדריך הוראות זה יספק לך מידע חשוב הנחוץ לטיפול ותחזוקה נאותים של המוצר החדש שלך. אנא הקדש מספר רגעים לקריאה יסודית של ההוראות ולהיכרות עם כל היבטי ההפעלה של התנור החדש שלך.

מכשיר זה יכול לשמש ילדים מגיל 8 ומעלה, וכן אנשים בעלי מוגבלות פיזית, חושית או שכלית, או חסרי ניסיון וידע, בתנאי שהם נמצאים תחת השגחה או שקיבלו הנחיות לגבי שימוש בטוח במכשיר והבינו את הסיכונים הכרוכים בכך.
אין לאפשר לילדים לשחק במכשיר.
אין לאפשר לילדים לבצע ניקוי ותחזוקת משתמש ללא השגחה.

- יש לפרוק את התנור ההלוגני מהאריזה, לוודא שכל הפריטים נמצאים ושלא נותרו רכיבים כלשהם בתוך הקופסה, וכן לוודא שראש התנור נקי מכל חומרי האריזה.
- יש להיעזר בשרטוט המפורט ולבצע את שלבי ההרכבה של התנור ההלוגני בהתאם להוראות.
- אין לחבר את התנור ההלוגני לחשמל עד להשלמת ההרכבה במלואה.
- אין לחבר את התנור ההלוגני לחשמל אם אחד מהרכיבים או כבל החשמל פגומים בדרך כלשהי.

אזהרה:
תנור זה אינו מצויד בהתקן לבקרת טמפרטורת החדר.
אין להשתמש בתנור זה בחדרים קטנים כאשר הם מאוכלסים על ידי אנשים שאינם מסוגלים לצאת מהחדר בכוחות עצמם, אלא אם ניתנת השגחה רציפה.

- יש להרחיק ילדים מתחת לגיל 3 מהמכשיר, אלא אם הם נמצאים תחת השגחה רציפה.
- ילדים בגיל 3 ועד פחות מגיל 8 רשאים רק להפעיל או לכבות את המכשיר, ורק בתנאי שהוא הוצב או הותקן במיקום הפעולה הרגיל המיועד לו, ושהם נמצאים תחת השגחה או שקיבלו הנחיות לגבי שימוש בטוח במכשיר והבינו את הסיכונים הכרוכים בכך.
ילדים בגיל 3 ועד פחות מגיל 8 אינם רשאים לחבר את המכשיר לחשמל, לכוונן אותו, לנקות אותו או לבצע בו תחזוקת משתמש.


אזהרה:
יש להשתמש בתנור ההלוגני רק על משטח יציב, קשיח ואופקי, כאשר כל רגלי הבסיס נמצאות במגע עם הרצפה.
(אם התנור ייטה או ייפול, מתג הכיבוי האוטומטי יופעל.)

1. יש למקם את התנור בחוץ או באזור פתוח וגדול, הרחק מכל מכשול כגון ענפים, וכן הרחק מכל חפץ שעלול להיות מושפע מחום, כגון רהיטים, וילונות או חומרים דליקים אחרים (מרחק מינימלי: 1 מטר).
2. אין להשתמש בסמוך לאמבטיות, אזורי רחצה או בריכות שחייה.
3. אין להשתמש באזורים שאינם מאווררים.
4. אין להשתמש במקום שבו מאוחסנים גז, בנזין, צבע או חומרים דליקים אחרים.
5. אין להכניס חפצים דרך סבכת ראש התנור, אין לחסום אותה ואין לכסות אותה.
6. אין למקם את התנור ישירות מעל או מתחת לשקע חשמל.
7. אין להזיז את התנור כשהוא מחובר לחשמל, ותמיד יש להמתין שתנור החימום יתקרר לפני אחסונו.


8. אין לגעת בראש התנור בזמן השימוש.
9. אין להשאיר את התנור פועל ללא השגחה, במיוחד כאשר ילדים ו/או בעלי חיים נמצאים בקרבת מקום.
10. סימון המצבים השונים של המתגים צריך להיות גלוי ממרחק של 1 מטר.
11. סימון האזהרה הנוגע לאיסור כיסוי המכשיר חייב להיות גלוי לאחר התקנת התנור. אין למקם סימון זה בגב תנורים ניידים.
12. יש להציב את היחידה במרחק של 100 ס"מ מהקיר ו-30 ס"מ מהתקרה.
13. יש להתקין את היחידה כראוי ובהתאם להוראות. יש לוודא שראש התנור נמצא בגובה של לפחות 1.8 מטר מהרצפה.
14. יש להציב את היחידה באופן יציב ובטוח על משטח אופקי וישר.
15. במהלך פעולת היחידה הטמפרטורה שלה גבוהה. היא נשארת חמה גם למשך פרק זמן לאחר הכיבוי. נגיעה בה בתקופה זו עלולה להיות מסוכנת.
16. אין להציב את היחידה בקרבת וילונות ו/או חפצים דליקים אחרים. אחרת קיימת סכנת התלקחות.
17. אין לכסות את היחידה בשום דבר במהלך פעולתה או זמן קצר לאחר כיבויה.
18. אין ללפף את כבל החשמל סביב היחידה.
19. יש לטפל ביחידה בזהירות ולהימנע מרעידות או ממכות.
20. במהלך הפעולה יש לוודא שהיחידה מחוברת כראוי להארקה.
21. אם היחידה ניזוקה, יש לתקנה באמצעות חשמלאי מוסמך.
22. אם כבל החשמל ניזוק, יש להחליפו על ידי סוכן שירות מורשה או איש מקצוע מוסמך אחר, כדי למנוע סכנה.
23. אין למקם את היחידה מתחת לשקע חשמל.
24. בעת ההרכבה יש להרחיק את היחידה מכל לוח או חומר דליק.
25. אם ילד משתמש ביחידה, השימוש חייב להיות תחת השגחת מבוגר.
26. אין זה בטוח להתקין את היחידה ליד בריכת שחייה, בחדר אמבטיה או באזור מקלחת.
27. היחידה מיועדת לשימוש ביתי בלבד. אין להשתמש בה באתרי בנייה, בחממות, באסמים או באורוות שבהם קיים אבק דליק.
28. ראש היחידה מגיע לטמפרטורה גבוהה בזמן הפעולה. יש לנתק את היחידה מהחשמל ולהמתין עד שתתקרר לפני הניקוי.
29. אין להשתמש ביחידה זו במקומות שבהם קיימים חומרים קורוזיביים או אוויר נדיף, כגון אבק, אדים, גז וכדומה.
30. אין להשתמש ביחידה זו כמייבש בגדים או כמייבש מגבות.
31. אין להשתמש ביחידה זו כתנור סאונה.
32. אין להשתמש ביחידה זו כמחמם חדר.
33. אין להשתמש ביחידה זו במקומות המשמשים לריבוי, גידול או החזקת בעלי חיים.
34. אין לטבול את היחידה במים לצורך ניקוי.
35. יש לחבר את היחידה לשקע חשמל שניתן לראותו בקלות ושיש אליו גישה נוחה.
36. במהלך הדקות הראשונות לאחר ההפעלה עשויות להופיע שתי נקודות כהות על פני גופי החימום. זהו מצב תקין, והוא לא ישפיע על ביצועי היחידה.
37. למטרות בטיחות, מותקן בתוך היחידה מתג הטיה.

תהליך ההרכבה


שלב 1: חבר את הצינור התחתון אל הבסיס באמצ־
עות הברגתם זה לזה.

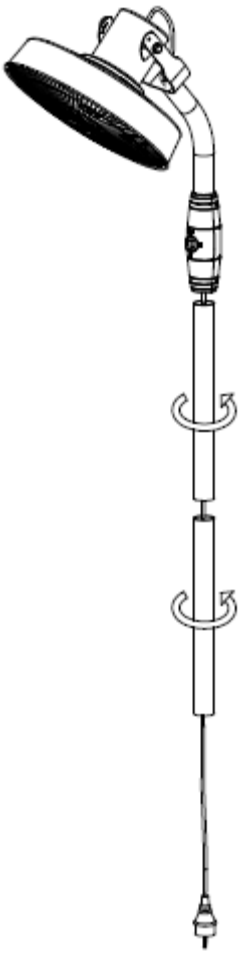


שלב 2: השחל את הכיסוי דרך הצינור התחתון,
ולאחר מכן חבר את התנור באמצעות הברגתם זה
לזה.

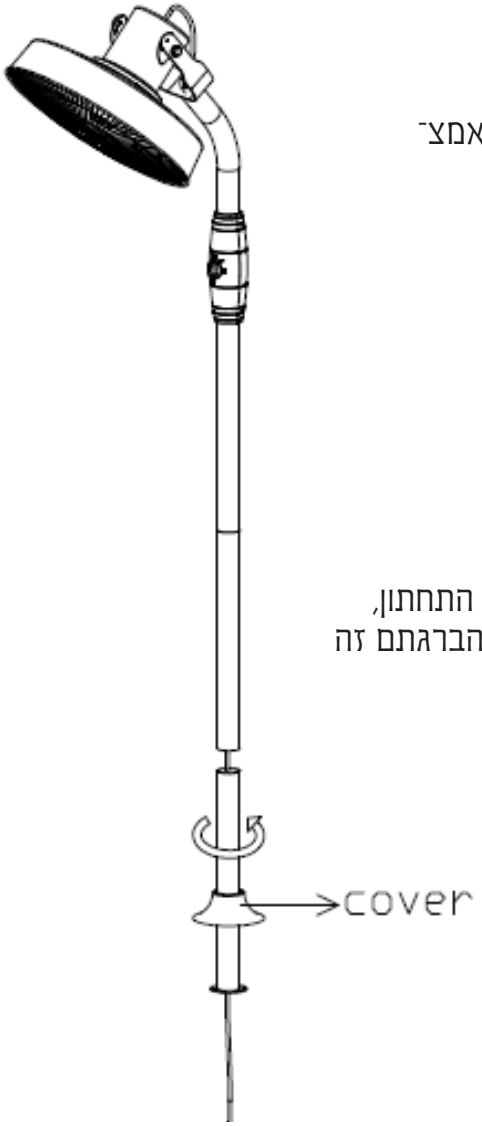


שלב 3: קבע את התנור אל הבסיס באמצעות 6
ברגים מסוג M6×10 מ"מ, בעזרת מפתח M6.

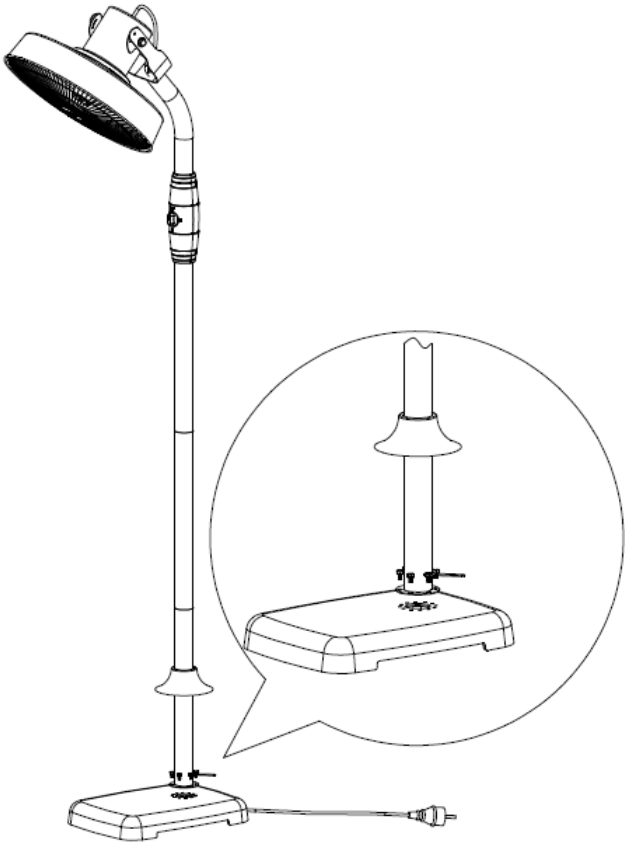


שלב 4: הטה את התנור לזווית הרצויה, ולאחר מכן נעל אותו במקומו באמצעות 2 ברגים מסוג M4×12 מ"מ.

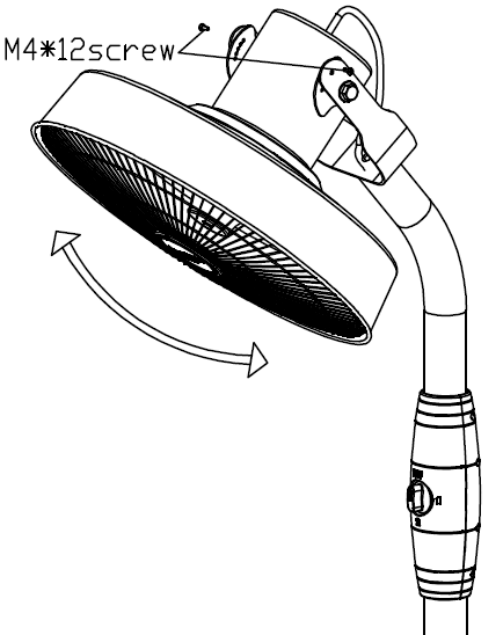

שלב 5: משוך בעדינות את כבל החשמל החוצה מן הבסיס, ככל האפשר. קבע את כבל החשמל מתחת לבסיס באמצעות 2 ברגים מסוג M4×12 מ"מ המסו־ פקים עם המוצר.

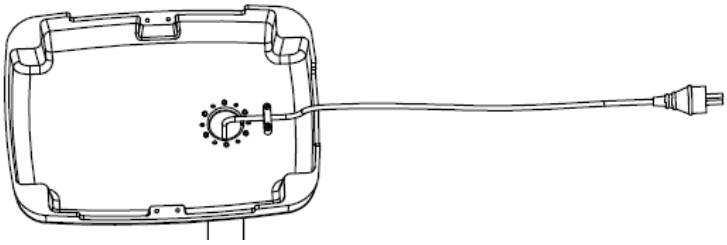


שלב 6: קבע את 2 החלקים על הבסיס באמצעות 4 ברגים מסוג M6×10 מ"מ, ולאחר מכן קבע את התנור אל הרצפה.
קדח שני חורים ברצפה, וקבע את התנור לרצפה באמצעות 2 ברגי עיגון מתפשטים, תוך הידוק הברגים בעזרת מפתח.

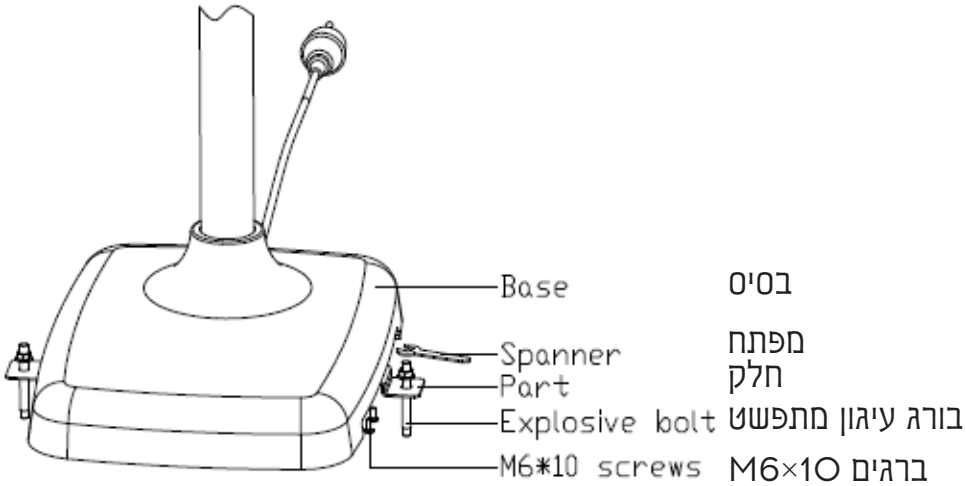


בסיס
מפתח
חלק
בורג עיגון מתפשט
ברגים M6×10

הפעלה

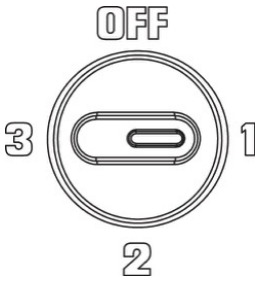


- יש להציב את התנור על משטח יציב וישר ולחבר אותו לשקע חשמל מוארק של 230V / 50Hz.
יש להפעיל את התנור רק כאשר הוא נמצא במצב אנכי והבסיס מחובר.
- תנור החימום ההלוגני החשמלי מצויד ב-3 דרגות חימום: נמוכה, בינונית וגבוהה.
1. סובב את המתג למצב "1" – המשמעות היא שהתנור פועל בדרגת החימום המינימלית (1000W).


2. סובב את המתג למצב "2" – המשמעות היא שהתנור פועל בדרגת החימום הבינונית (1500W)

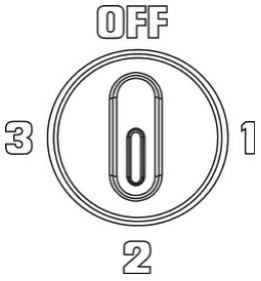

3. סובב את המתג למצב "3" – המשמעות היא שהתנור פועל בדרגת החימום המקסימלית (2500W).

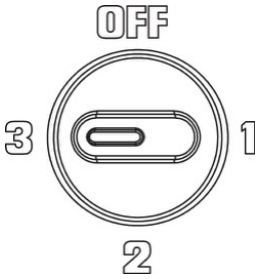

4. סובב את המתג למצב "OFF" – התנור כבוי.

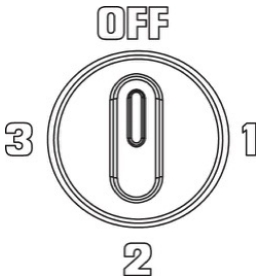

- למרות שהתנור עמיד בפני התזות מים, אין להשתמש בו בזמן גשם או בתנאים רטובים.
- כאשר תנור החימום אינו בשימוש, יש תמיד לנתק את כבל החשמל מאספקת החשמל.

טיפול ותחזוקה

- נתק את התנור מהחשמל והנח לו להתקרר לחלוטין.
- כאשר המכשיר מנותק מאספקת החשמל, יש לנקות את חלקו החיצוני באמצעות מטלית לחה.
  אין להשתמש בחומרי ניקוי קורוזיביים או מבוססי ממס, ואין לטבול את המכשיר במים.
  יש להמתין עד שהיחידה תתייבש לחלוטין לפני השימוש.

אחסון

אם התנור לא יהיה בשימוש למשך פרק זמן ממושך, יש לאחסן אותו במקום קריר ויבש.
כדי למנוע הצטברות אבק ולכלוך, מומלץ לארוז מחדש את התנור באריזתו המקורית.

מפרט טכני

- מתח: 220-240V~ 50-60Hz
- הספק: 1000/1500/2500w
- גובה: 230 ס"מ
- משקל נטו: 20.5 ק"ג
- דרגת בידוד: Class 1



WEEE
סמל זה המופיע על המוצר או בהוראות מציין כי בתום חיי המוצר אין להשליך את הציוד החשמלי והאלקטרוני יחד עם הפסולת הביתית.
באיחוד האירופי קיימות מערכות איסוף נפרדות לצורך מיחזור.
למידע נוסף, יש לפנות לרשות המקומית או לקמעונאי שממנו נרכש המוצר.